



Is there a factory-set default password for other E-Series users

https://kb-stage.netapp.com/on-prem/E-Series/SANtricity-OS-KBs/Is_there_a_factory-set_default_pass...

Updated: Wed, 24 Jun 2026 07:14:00 GMT

Applies to

E-Series

Answer

No, other users cannot access SANtricity System Manager until a password is set

Additional Information

Starting from SANtricity 11.40 only `SPRI` and `Diag` users have a factory-set default password