



How to zero spare drives for reconstruction

https://kb-stage.netapp.com/on-prem/ontap/Ontap_OS/OS-KBs/How_to_zero_spare_drives_for_recons...

Updated: Wed, 22 Apr 2026 02:10:28 GMT

Applies to

- ONTAP 9
- Clustered Data ONTAP 8.3
- Clustered Data ONTAP 8.2
- Data ONTAP 8.2 7-Mode

Description

Error message: `/vol10/plex0/rg0/0a.45 (S/N XXXXX): disk failure detected`

Earlier versions of Data ONTAP might display a message similar to the following:

Error message: `ERROR: unable to start reconstruction for /vol0/plex0/rg0: No zeroed disk of correct size available`

(For more information, see [BUG 85383](#))

The `No zeroed disk of correct size available` message is displayed after a drive has failed, although there are spares of the same size.

A disk failure message occurs.