



---

## How to troubleshoot system fault LEDs

[https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/How\\_to\\_troubleshoot\\_system\\_fault\\_LEDs](https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/How_to_troubleshoot_system_fault_LEDs)

Updated: Wed, 22 Apr 2026 02:10:30 GMT

### Applies to

- AFF-A800
- AFF-A700
- AFF-A300
- AFF-A220
- AFF-A200
- FAS9000
- FAS8200
- FAS2750
- FAS2720
- FAS2650
- FAS2620

## Description

This KB explains how to troubleshoot the fault LED being lit.