



Why does an FC protocol igroup type show FC/FCoE rather than FC on ONTAP System Manager GUI?

https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/why_does_an_FC_protocol_igroup_type_...

Updated: Wed, 24 Jun 2026 07:13:57 GMT

Applies to

- ONTAP 9.x
- ONTAP System Manager

Answer

ONTAP CLI shows initiator groups type as the parameter value **FCP**, **iSCSI**, or **mixed**. Whereas, ONTAP System Manager shows the initiator groups type as **FC/FCoE**, **iSCSI** or **mixed**.

Additional Information

N/A