



Why does the command `ucadmin show` display "This table is currently empty"?

https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Why_does_the_command_ucadmin_sho...

Updated: Wed, 24 Jun 2026 06:08:00 GMT

Applies to

ONTAP 9

Answer

- Because the ONTAP node does not have onboard CNA ports or a CNA card, the command `ucadmin show` displays "This table is currently empty".
- And there is no available port that can be changed to an FC port.

Example:

```
Cluster::> ucadmin show
This table is currently empty.
```

Additional Information

[What are Unified Target Adapter \(UTA2\)/CNA Ports and how to configure them?](#)