



---

## How to get the current temperature threshold on NetApp HCI

[https://kb-stage.netapp.com/Legacy/NetApp\\_HCI/Operating\\_System/How\\_to\\_get\\_the\\_current\\_tempera...](https://kb-stage.netapp.com/Legacy/NetApp_HCI/Operating_System/How_to_get_the_current_tempera...)

Updated: Wed, 24 Jun 2026 06:18:08 GMT

### Applies to

- NetApp HCI nodes

### Description

How to get the current threshold settings from a NetApp HCI node