



How to enable/disable SSH for Element OS v10.3 - 12.7

https://kb-stage.netapp.com/on-prem/solidfire/Element_OS_Kbs/How_to_enable_disable_SSH_for_Ele...

Updated: Wed, 24 Jun 2026 06:32:09 GMT

Applies to

- NetApp Element OS v10.3 - 12.7
- NetApp SolidFire SF-Series node
- NetApp FC-Series
- Netapp H-Series

Description

This document describes how to enable or disable SSH access to the storage nodes and set a timer

