



## Does the LIF associate with an existing vServer can be changed to another IPspace

[https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Does\\_the\\_LIF\\_associate\\_with\\_an\\_existin...](https://kb-stage.netapp.com/on-prem/ontap/OHW/OHW-KBs/Does_the_LIF_associate_with_an_existin...)

Updated: Wed, 24 Jun 2026 07:24:47 GMT

### Applies to

ONTAP 9.4

### Answer

IPspace is a container for ports, subnets, and SVMs that serve data.

The IPspace can be specified when creating vserver, you cannot change the IPspace after you create vserver.

Vserver can only associate with one IPspace, you cannot change the existing lif of the vserver to another IPspace.

## Additional Information

[Standard properties of IPspaces](#)